



**425-6124**  
**'07-'09 Durango**


## Installation Instructions

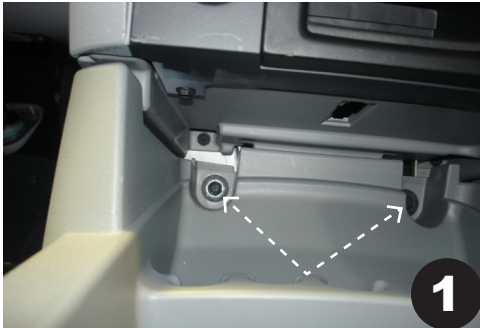

Remove (2) 10mm bolts underneath dash pocket.

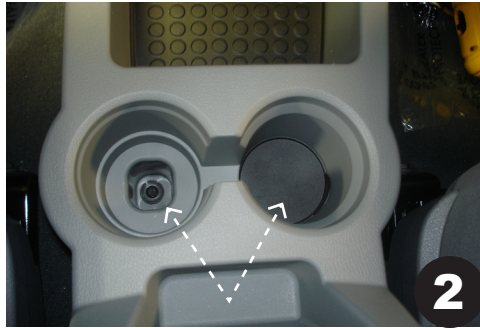


Remove front cupholder grips and (2) 10mm bolts.

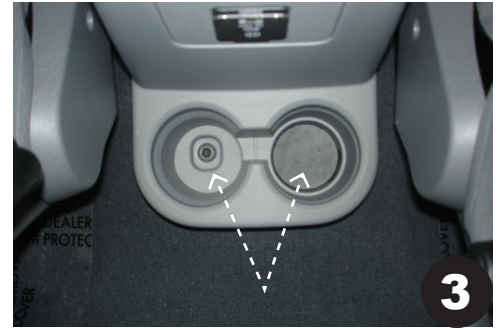


Remove rear cupholder grips and (2) 10mm bolts.



Slide driver's seat forward and lift up factory console. Unplug the console wiring harness. Remove console.

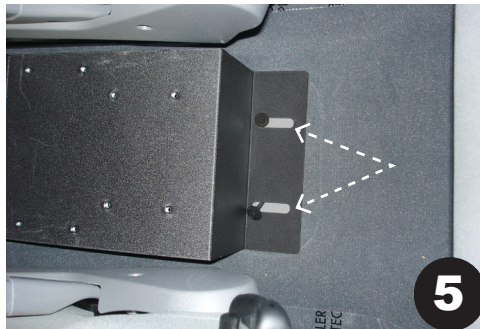

Using factory bolts, secure the backend of the Contour Console.

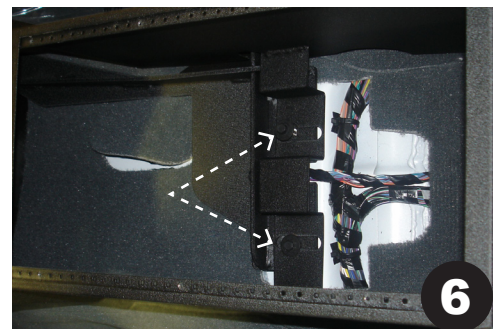

Using factory bolts, secure the center crossbeam of the Contour Console.



Complete the installation by adding faceplates and accessories.

  
**PUBLIC SAFETY SOURCE**  
WWW.PUBLICSAFETYSOURCE.COM  
**1-866-587-4661**

