


JOTTO CONSOLE

By JOTTO DESK®

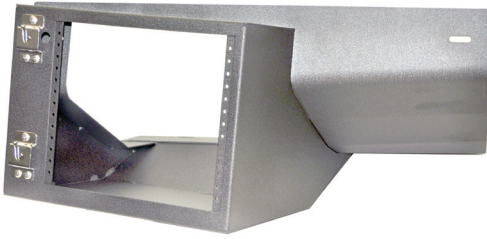

**425-6188
'11+ Caprice
9C3 Glove Box
Contour Console**

Installation Instructions



1
Begin by removing the two (2) lower Phillips screws from the bottom of the glove box.



2
Open glove box and remove three (3) Phillips screws from top flange of glove box.




3
Remove plastic cover on left side as shown. Remove additional Phillips screw.



4
Remove plastic cover on right side as shown. Remove additional Phillips screw.



5
With glove box removed, detach light connection.

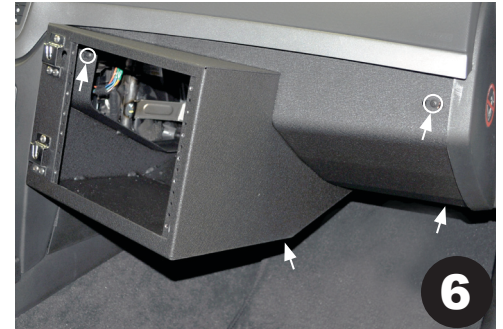

6
Install Console using four OEM Phillips screws as shown. Two (2) upper screws and two (2) lower screws.


PUBLIC SAFETY SOURCE
WWW.PUBLICSAFETYSOURCE.COM
1-866-587-4661


**DIVERSIFIED
PRODUCTS.NET**